

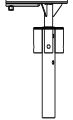
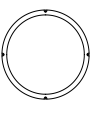
 
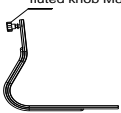

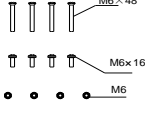
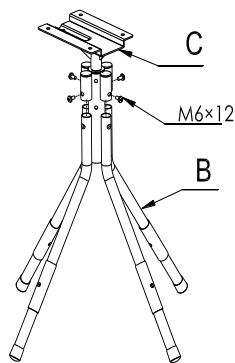
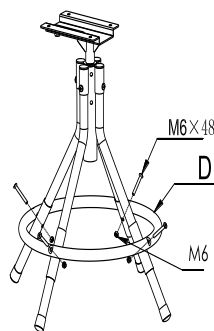



A	B	C	D	E	F	G	H
							 M6 x 48 M6 x 16 M6
Stool Seat	Stool Leg	Adjustable Screw Rod	Foot Ring	Plate	Backrest Support Bar	Backrest	Hardware
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	M6 x 48 Screw- 4 pcs M6 x 16 Screw- 4 pcs M6 nut- 4 pcs

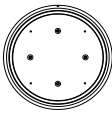


1. Mount the 4 stool legs (B) to the adjustable screw rod (C) with M6x12 screws.




2. Position the foot ring (D) outside the stool legs, insert M6x48 screws into 4 holes in the leg tabs. Tighten nuts.

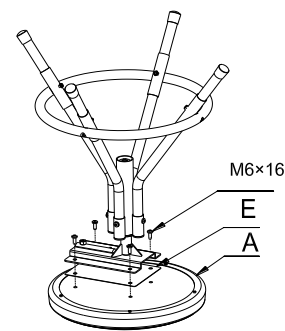

3. Position the leg assembly on the seat. Insert plate (E) between the stool seat (A) and legs, and align the mounting holes. Securely tighten with M6x16 screws. Align the "Front" labels on the stool seat (A) and other components.

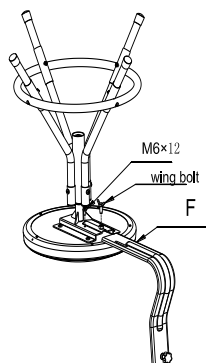

4. Insert backrest support bar (F) into the adjustable screw rod and tighten it with M6x12 screw. Adjust the depth of the backrest with the wing bolt.

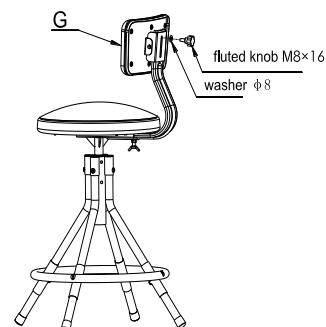

5. Remove the plastic knob on the backrest (G). Insert the backrest into the support bar. Tighten the plastic knob to fix the backrest to desired height.

Stool Seat Height Adjustment

Adjust to desired height by turning seat clockwise (downward) or turning counter-clockwise (upward).

Stool Backrest Depth Adjustment

(Refer to picture 4) Loosen the wing bolt, adjust the support bar to desired position and retighten the wing bolt securely.

Stool Backrest Height Adjustment

(Refer to picture 5) Loosen the plastic knob attached to the backrest, adjust the backrest height up and down to desired level, securely tighten the knob again.



CAUTION

Assemble units as described. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts, may result in failure and injury.