

PIZZA HUT, DELCO FRONT COUNTER SHELVING UNIT

Metro Model #PH116A

Item #116A



Tools Needed

Rubber Mallet
Tape Measure

Parts

(4) 27PK2 Posts
(3) 1848NK2 Shelves
(2) DD18K2 Dividers
(1) L18N-4K2 Shelf Ledge
(2) CSM6-Y Yellow Shelf Markers
(3) SB91587CAS Small Bins
(5) SB91516CAS Large Bins
(2) Packages of DL91516CAS
Bin Dividers
(3) Bags of Black Split Sleeves

Assembly Instructions

1) Place a pair of Split Sleeves on each post 6" up from the floor.
Note - There is a bead inside each half of the Split Sleeve. This bead fits into the groove on the post. The bead is towards the top of the Split Sleeve.

Place an 1848NK2 Shelves over the posts and onto the Split Sleeves. Secure in place by tapping each corner of the shelf.


2) Place a pair of Split Sleeves on each post 14" up from the floor. Place an 1848NK2 Shelf over the posts and onto the Split Sleeves. Secure in place.

3) Place a pair of Split Sleeves on each post 24" up from the floor. Place the last 1848NK2 Shelf over the posts and onto the Split Sleeves. Secure in Place.

4) Place the Shelf Ledge on lowest shelf as shown. The wires of the ledge straddle the end of the shelf. Place the first Divider 26" in from the left side of the shelving unit on the lowest shelf. Place the other divider 8" from the first divider.

5) Arrange the Bins according to the drawing. Note - Where there are 2 or more items in a bin, this is where the Bin Dividers are to be used. You will have extra dividers.

OVERALL LENGTH OF UNIT IS 48"

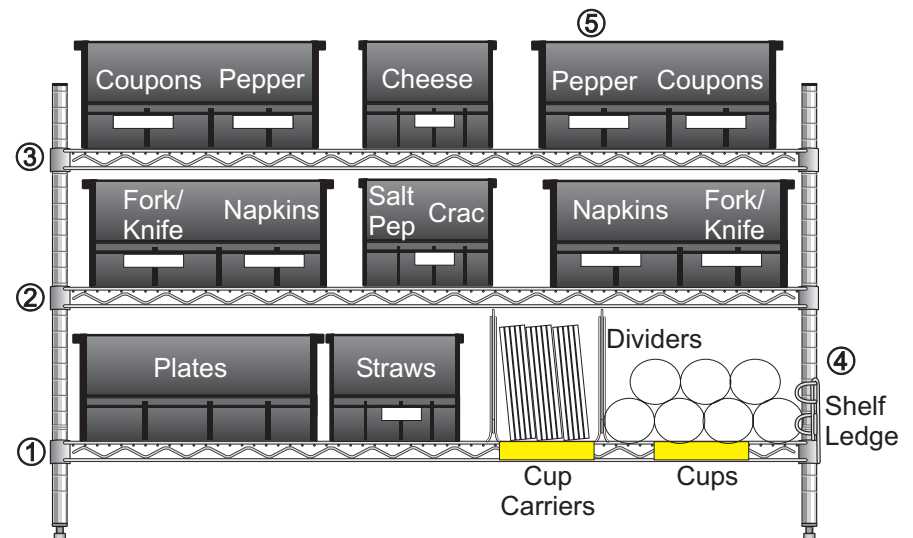

INSTR-PH116A
07Aug2002